



Greenstar 8000 Style

GR8700iW 30 CB NG

7738100832

The information provided fulfills the requirements of regulations (EU) 811/2013 and (EU) 813/2013.

| Productdata | Symbol | Unit | 7738100832 |
|---|-------------------|--------|------------|
| Condensing boiler | | | Yes |
| Low temperature boiler | | | No |
| B1 boiler | | | No |
| Cogeneration space heater | | | No |
| Equipped with a supplementary heater? | | | - |
| Combination heater | | | Yes |
| Rated heat output | Prated | kW | 30 |
| Seasonal space heating energy efficiency | η _s | % | 94 |
| Energy Efficiency Class | | | А |
| Useful heat output | | | |
| At rated heat output and high temperature regime | P ₄ | kW | 29,5 |
| At 30 % of rated heat output and low temperature regime | P ₁ | kW | 9,9 |
| Useful efficiency | | | |
| At rated heat output and high temperature regime | η_4 | % | 88,5 |
| At 30 % of rated heat output and low temperature regime | η_1 | % | 98,7 |
| Auxiliary electricity consumption | · | | |
| At full load | elmax | kW | 0,067 |
| At part load | elmin | kW | 0,014 |
| In standby mode | P _{SB} | kW | 0,001 |
| Other items | | | |
| Standby heat loss | P _{stby} | kW | 0,071 |
| Ignition burner power consumption | P _{ign} | kW | 0,000 |
| Emissions of nitrogen oxides (only gas- or oil fired) | NO _x | mg/kWh | 23 |
| Annual energy consumption (average climate conditions) | Q _{HE} | kWh | - |
| Annual energy consumption | Q _{HE} | GJ | 50 |
| Sound power level, indoors | L _{WA} | dB | 53 |
| Additional data for combination heaters | | | |
| Declared load profile | | | XL |
| Water heating energy efficiency | $\eta_{ m wh}$ | % | 89 |
| Water heating energy efficiency class | | | А |
| Daily electricity consumption (average climate conditions) | Q _{elec} | kWh | 0,180 |
| Annual electricity consumption | AEC | kWh | 40 |
| Daily fuel consumption | Q _{fuel} | kWh | 21,652 |
| Annual fuel consumption | AFC | GJ | 17 |
| Indication about ability working only during off-peak hours | | | No |
| Other load profiles | | | - |
| Standing loss | S | W | - |
| Storage volume | V | | - |
| | I | l | |

Specific precautions for installation, maintenance as well as recycling and/or disposal are provided within the installation and operating manuals. Read and follow the installation and operating manuals.