




Bosch Group
7716 192 020

15SBi & 24SBi System Boilers

TWIN CHANNEL MECHANICAL TIMESWITCH INSTALLATION & OPERATING INSTRUCTIONS

THESE INSTRUCTIONS APPLY IN THE U.K. ONLY
THESE INSTRUCTIONS ARE TO BE LEFT WITH
THE USER OR AT THE APPLIANCE

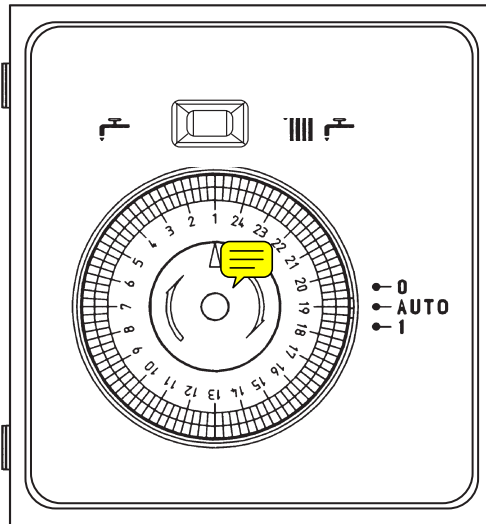

General information is given in the users instruction leaflet dispatched with the appliance and on the lighting instruction plate fitted on the appliance.

Gas Safety (Installation and Use) Regulations 1998: All gas appliances must be installed by a competent person, in accordance with the above regulations. Failure to install the appliance correctly could lead to prosecution. The manufacturers notes must not be taken, in any way, as overriding statutory obligations.

IMPORTANT: Read these instructions carefully in order to get the best from your appliance.

WARNING: This appliance must be earthed and protected by a 3A fuse if a 13A plug is used, or, if any other type of plug is used, by a 5A fuse either in the plug or adaptor or at the distribution board.

TIMESWITCH

24 hour twin channel mechanical timeswitch. User maintenance is not possible.

CONTROL

Any number of **ON** and **OFF** periods can be chosen within a 24 hour period.

There will be at least a 15 minute separation between the operations.

TO FIT THE TIMESWITCH

Before starting work, turn off the mains electricity supply to the appliance.

Remove the front panel from the appliance by sliding it upwards to clear the locating pegs and securing clips.

Remove the three screws securing the bottom panel to the fascia.


Remove the two screws securing the fascia assembly to the appliance and lower it forwards to the servicing position.

Remove the timeswitch blanking plate from the front of the fascia by carefully releasing the clips at the rear right-hand side and withdrawing the plate from the front.

Feed the electrical lead from the timeswitch through the fascia to exit directly underneath it and fit the timeswitch by hooking the top two lugs up into the fascia slots and then push the bottom two clips until they snap into position.



From the rear of the fascia, remove the plastic splash cover to reveal the electrical connection box and remove the two screws securing the cover to the box.

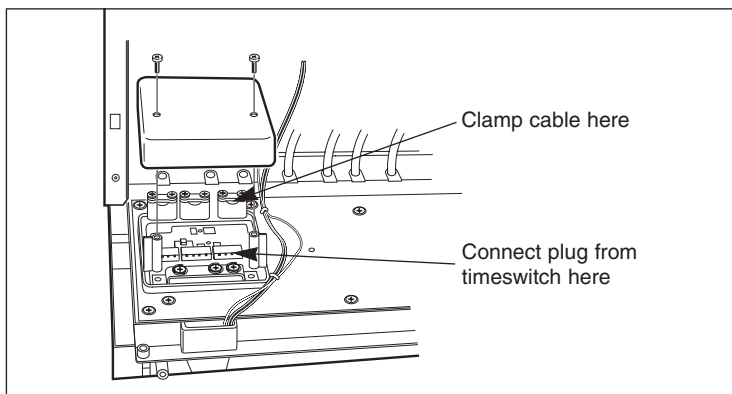Secure the cable from the timeswitch using the clamping positions on the underside of the fascia and the rear of the electrical connection box and plug the cable into the corresponding five-way socket on the rear of the fascia.



Replace the electrical box cover, splash cover and fascia bottom panel, secure the fascia using the two screws and refit the front panel

TO SET THE TIMESWITCH

The selector switch allows the timer to control either the hot water only  or both the central heating and the hot water. 

TO SET THE CLOCK

Turn the dial clockwise until the correct time of day is at the pointer.

TO SET THE DEMAND PERIODS


To set the **ON** periods push the grey tappets towards the centre from the start of the period until the end of each period. Each tappet represents a 15 minute time period.

OPERATIONAL NOTES

Switching:

The switching options are:

- | | |
|------|---|
| 0 | Off all the time |
| AUTO | On and Off as selected by the adjustment of the tappets |
| I | On all the time |

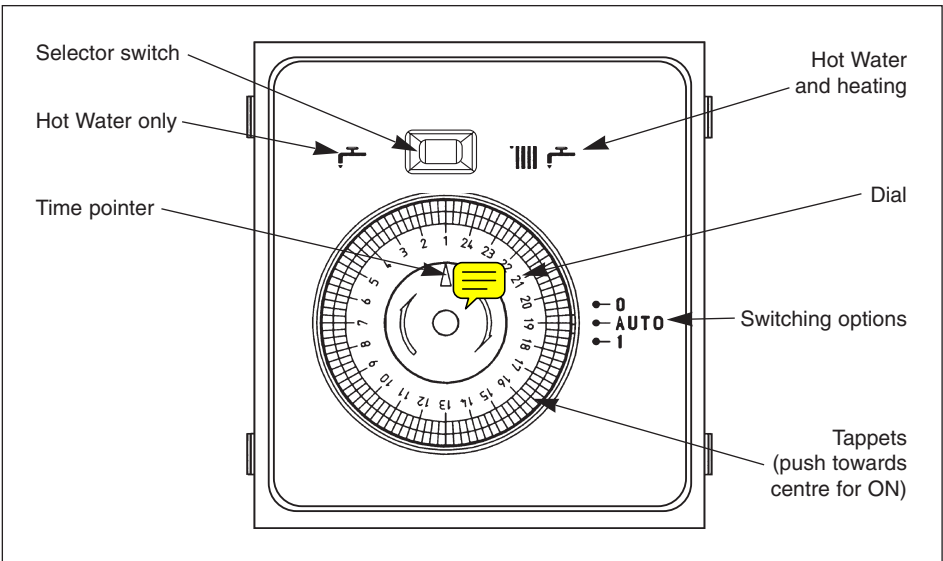

TO LIGHT AND STOP THE APPLIANCE

Refer to the User operating instruction leaflet or the lighting instruction plate on the appliance.



WORCESTER HEAT SYSTEMS

Cotswold Way,

Warndon,

Worcester WR4 9SW

Tel: 01905 754624 Fax: 01905 754619