




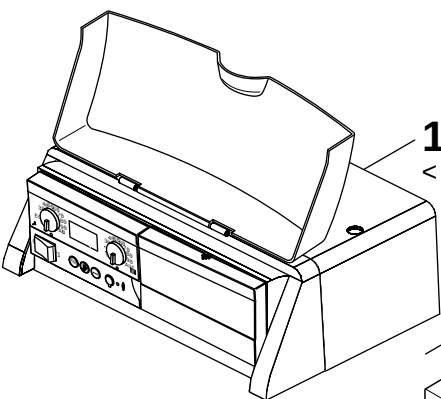


1A
< 11/2009

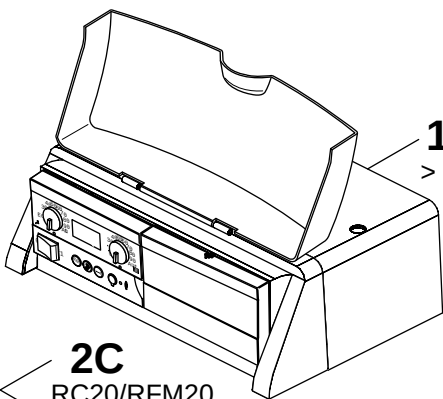


1B
> 11/2009

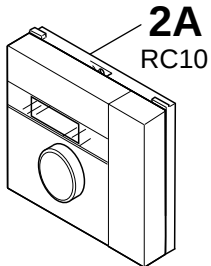


2A
RC10

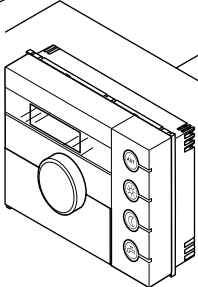


2C
RC20/RFM20

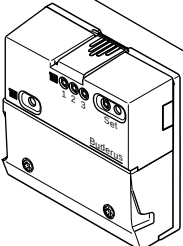


2D
RC30

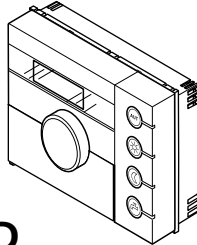


2B
RC20
RC25

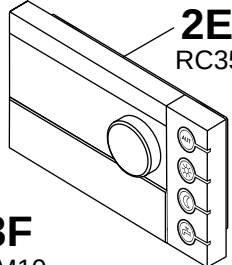


2E
RC35

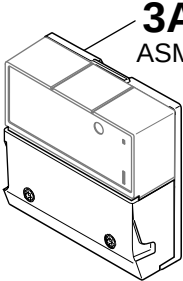


3A
ASM10

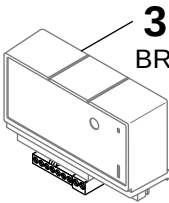


3B
BRM10

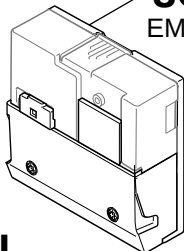


3C
EM10

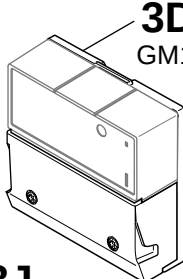


3D
GM10

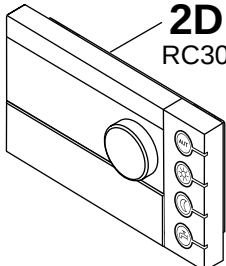


2D
RC30

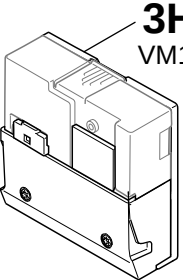


3H
VM10

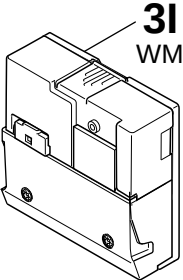


3I
WM10

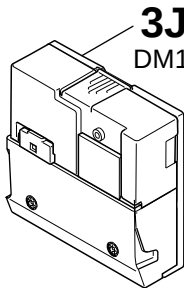


3J
DM10

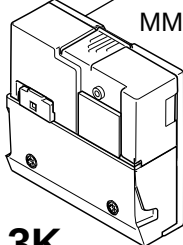


3E
MM10

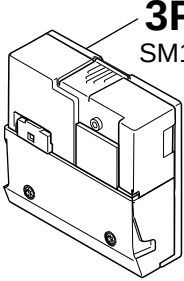


3F
SM10

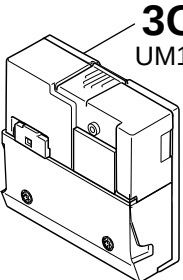

3G
UM10

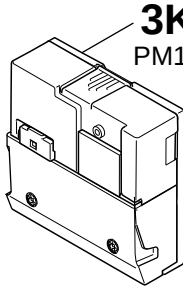

3K
PM10

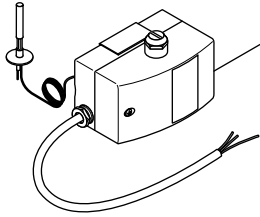

4A